

Assembly and Maintenance Instructions



4500 Floor Sweeper 6000 Floor Sweeper

Contents


- 1 3M brand Floor Sweeper
- 4 section handle

Assembly

To assemble the handle, insert the tapered end of each friction-fit handle section into the ring-marked end of another friction-fit handle section, applying Moderate connecting pressure And a clockwise twist.

Next insert the tapered end of The top friction-fit handle section into the ring-marked end of the handle section with hand grip using the same pressure twist Technique.

Finally, place the ring-marked end of the bottom friction-fit handle section over the stud extending from top center of the sweeper

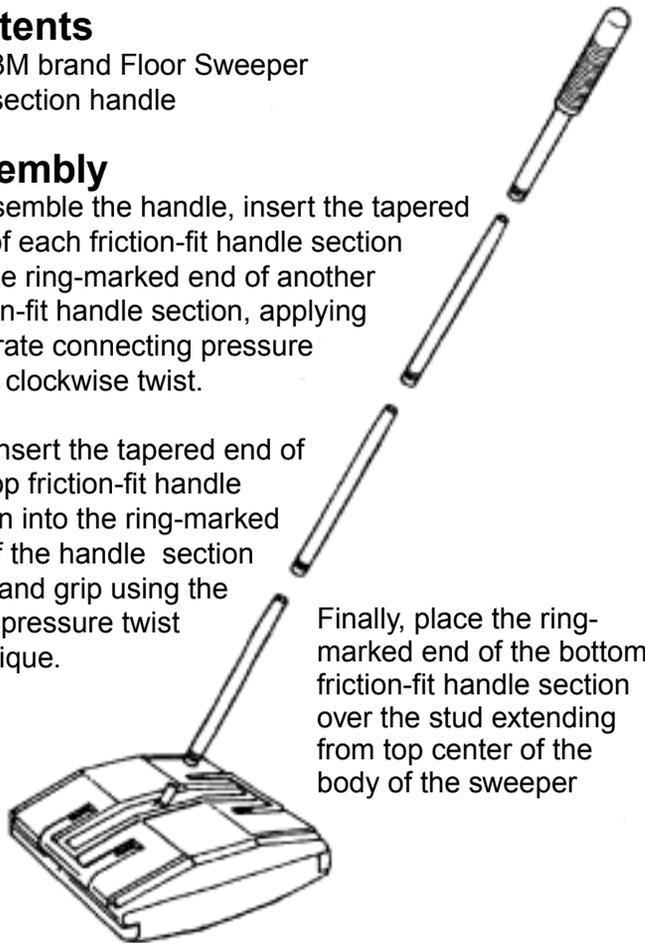


Emptying Debris Boxes

Debris is collected in the two debris boxes that must be removed to be emptied.

To remove, raise the handle and lift out the debris box.

To reinsert the debris box, simply reverse the above procedure.

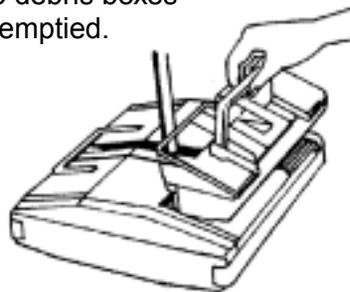


Note: The sweeper should not be used to pick up burning or glowing materials such as ashes or cigarettes.

Rotorblade Removal and Cleaning

The rotorblades can be easily removed for cleaning or replacement.


To remove a rotorblade, with your thumb push out on one of the square metal tabs at either end of the rotorblade. At the same time, grip the center of the rotorblade with the thumb and forefinger of the other hand and **pull up** gently.

Release the other End by pushing **Out** on the Opposite metal tab and lifting The rotorblade Out.

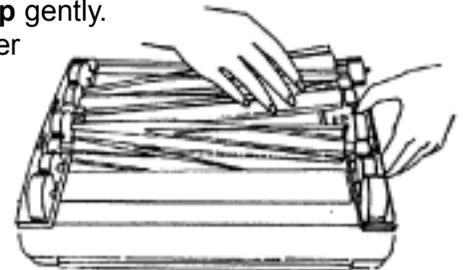


To reinsert the rotorblade, center it in its cavity and gently **press down** on the end until it snaps in place.

The rotorblades can be cleaned by rinsing them with warm water.

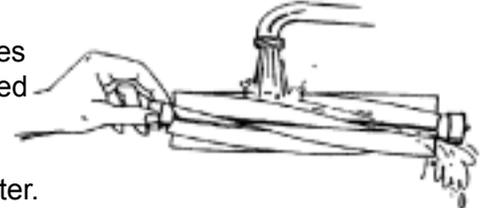

3M 6000 FLOOR SWEEPER

- 6320 Complete handle assembly - friction type
- 6334 1 dust bin assembly
- 6360 1 Rotorblade assembly*
- 6365 10 axle caps
- 6366 4 large wheel assemblies (4 wheels, 4 axles, and 4 axle caps)
- 6367 4 small wheel assemblies (4 wheels, 4 axles, and 4 axle caps)
- 6368 2 center wheel assemblies (2 wheels, 2 axles, 2 axle caps, and 2 buckle rings)
- 6369 Maintenance kit (2 ea 6360, 1 ea. 6365)
- 6370 Maintenance kit (2 ea 6360, 1 ea, 6366, 1 ea 6367, 1 ea 6368)

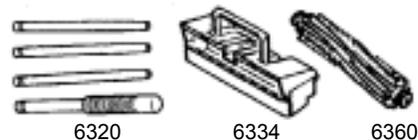

* BEFORE REPLACING ROTORBLADES IT IS RECOMMENDED THAT THE SWEEPER BE THOROUGHLY CLEANED AND INSPECTED TO MAKE CERTAIN THAT ALL PARTS ARE IN GOOD OPERATING CONDITION.